












 

 









 











 

 

 





















 



 


 










Original	Replacement	Original	Replacement
	Power		Power
	VOD		Media
	n		Smart
	EPG		Guide
	Home		Menu
	Info		Info
	Back		Back
	OPT		Options
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	CH+		Ch +
	CH-		Ch -
	Stop		Stop
	<<		<<
	Pause		Pause
	Play		Play
	>>		>>
	R		Rec
	Mute		Mute
	@		TV/R
	Text		Text
	List		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3





	Original	Replacement		Original	Replacement
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Setup		Shift + Options		
	APP		Shift + Media		

