



Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Power Tv		Shift + Power		Vol+		Vol+
	Vol+ Tv		Shift + Vol+		Cancel		Exit / Cancel / Clear
	DVD		Shift + 2		0		0
	TV/AV Tv		TV/Radio /		+10		Guide / EPG / -/-
	Vol- Tv		Shift + Vol-		Vol-		Vol-
	FM		Shift + 5		I<</Skip Down		I<< / Preset-
	1		1		>>I/Skip Up		>>I / Preset+
	2		2		<< Slow Search		<< / Tune-
	3		3		Slow Search >>		>> / Tune+
	EXT-IN		Eject / Surround		Stop		Stop / Hold
	4		4		Pause		Pause / Step / Freeze
	5		5		Play		Play / Slow
	6		6		Top Menu/Direct Navigator		Smart / List
	One Touch Play		Display / Media		Up		Up
	7		7		Menu/Play List		Menu / Home
	8		8		Left		Left





	Original	Replacement	Original	Replacement
	Enter			
	Right			
	Functions			
	Down			
	Return-Setup			
	SW.Level			
	EQ			
	C.Focus			
	S.SRD/PLII			
	FL Display/Sleep			
	Test			
	Play Mode/-CH Select			
	Muting			

