






 





















































































 




Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		6		6
	Power		Power		A/B		Shift + Yellow / YouTube /
	(↔)		Audio / Lang I/II		7		7
	TV		TV/Radio /		8		8
	V		Sound / Title		9		9
	[#]→		Picture / Format		Output		AV / Input / RDS
	[.]≡		Text / Goto		-/--		Guide / EPG / -/--
	[≡+]		Shift + Stop /		0		0
	[≡◆]		Shift + Zoom /		C		Exit / Cancel / Clear
	[≡x]⊙		Back / Return		IN 123		D.Menu / Top
	[≡?] [+]		Sleep / Timer		1-/TP Off		Fav / Marker / PC
	1		1		C00		Setup / OPT /
	2		2		2-/TP On		Shift + Fav / Marker / PC
	3		3		Vol+		Vol+
	[≡i]		Info / Angle		Prog+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		Prog-		CH- / Page-





Original	Replacement
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Left
	 Right
	 Zoom / Size
	 Menu / Home
	 Smart / List
	 OK
	 Up
	 Subtitle / EQ
	 >>I / Preset+
	 Shift + Right
	 Down
	 Shift + CH+ /

Original	Replacement
	 I<< / Preset-
	 Shift + Left
	 Shift + Power
	 Shift + CH- /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze





Original		Replacement		Original		Replacement	
	Power Down		Power				
	Prog+ Down		CH+ / Page+				
	Prog- Down		CH- / Page-				
	Stop		Stop / Hold				
	Pause		Pause / Step / Freeze				
	Rec		Rec / Rec Mode				
	>>		>> / Tune+				
	Play		Play / Slow				
	<<		<< / Tune-				





















Original	Replacement	Original	Replacement
	Power Down		Power
	Prog+ Down		CH+ / Page+
	Prog- Down		CH- / Page-
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec		Rec / Rec Mode
>> icon"/>	>>	>> / Tune+ icon"/>	>> / Tune+
	Play		Play / Slow
<< icon"/>	<<	<< / Tune- icon"/>	<< / Tune-





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 <<<	 <<< / Tune-		
 Play	 Play / Slow		
 >>>	 >>> / Tune+		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

