
 






 
 
 

 

 

 
 




Original	Replacement
 Power	 Power
 SD	 Smart
 [+]	 Info
 Tv/AV	 AV
 Menu	 Menu
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Tv/Text	 Text
 F.P.	 Eject

Original	Replacement
 Index	 List
 Hold	 Options
 N	 Media
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original	Replacement
0	0
-/--	Guide
C	Pre Ch
Aspect	3D
(↔)	Format
Multiwindow	D. Menu
Direct Tv Rec	TV/R
Power VCR	Shift + Power
Rec VCR	Rec
Programme Up	Shift + Ch +
Programme Down	Shift + Ch -
<< VCR button"/> << VCR	<< button"/> <<
>> VCR button"/> >> VCR	>> button"/> >>
Stop VCR	Stop
Pause/Step VCR	Pause
Play VCR	Play

Original	Replacement





Original	Replacement	Original	Replacement
Power DVD	Power		
Rec DVD	Rec		
Programme Up	Ch +		
Programme Down	Ch -		
<< DVD	<<		
>> DVD	>>		
Stop DVD	Stop		
Pause/Step DVD	Pause		
Play DVD	Play		

Original	Replacement	Original	Replacement

