

 

 

 

 

 

 

 

 

 
 
 
 
 
 
 



 









Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/- 10+	 Shift + Guide
 Recall	 Back
 P.Mode	 Shift + Format
 Nicam	 Shift + Options
 S.Mode	 Dual

Original	Replacement
 Source	 AV
 Info	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 Format
 Sleep	 Sleep
 Freeze	 Shift + Stop
 CH+	 Ch +
 CH-	 Ch -
 TV	 Smart





Original	Replacement
 USB	 Media
 Shift	 3D
 Rec	 Rec
 Auto / D.Setup	 Options
 FAV / D.Menu	 Pre Ch
 FAV / D.Menu	 Shift + Menu
 EPG / D.Title	 Guide
 Text / Angle	 Text
 Subtitle	 Subt
 Mix / Eject	 Shift + Text
 Mix / Eject	 Eject
 Play/Pause / TV/Radio	 Play
 Play/Pause / TV/Radio	 Pause
 Play/Pause / TV/Radio	 TV/R
 Stop / Hold	 Stop
 << / Index	 <<
 >> / Size	 >>

Original	Replacement
 I<< / Reveal	 I<<
 >>I / Subpage	 >>I
 Red / Audio	 Shift + Dual
 Red / Audio	 Red
 Green / Goto	 Green
 Yellow / Repeat	 Yellow
 Blue / A-B	 Blue

