












 




 






 

 



 







 



 










 



 




	Original	Replacement		Original	Replacement
	Power		Power		CH +
	1		1		Ch -
	2		2		Vol +
	3		3		Vol -
	4		4		I << Skip
	5		5		Skip >> I
	6		6		<< Slow/Search
	7		7		Slow/Search >>
	8		8		Pause
	9		9		Stop
	0		0		Play
	-/--		Guide		Menu/Play List
	Cancel		Exit		Top Menu / Direct Navigator
	AV		AV		Functions
	Input Select		Media		Return
	Direct Tv Rec		TV/R		Up
	ShowView		3D		Down







 













Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 Ok
 Rec	 Rec
 Frame II >	 Shift + Right
 < II Frame	 Shift + Left
 Manual Skip	 Format
 Erase	 Text
 Prog/Check	 Sleep
 Time Slip	 Smart
 Timer	 Shift + AV
 Marker	 Pre Ch
 Status	 List
 Rec Mode	 Shift + Rec
 F.Rec	 Subt
 A/Display	 Red
 A/Display	 Info

Original	Replacement
 B/Position	 Green
 C/Audio	 Yellow
 C/Audio	 Dual
 D/AV Link	 Blue





Original	Replacement
 Power	 Power
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 A	 Red
 B	 Green
 C	 Yellow

Original	Replacement
 D	 Blue

