

 




 




 

 


 





 



 





 










Original	Replacement	Original	Replacement
 Power TV	 Power	 Test	 Text
 Home Theater	 Media	 Delay	 Format
 Home Theater	 Smart	 Level	 3D
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 +	 Ch +
 Tuner/Band	 Green	 1 Tv	 1
 DVD	 Blue	 2 Tv	 2
 Up	 Up	 3 Tv	 3
 Left	 Left	 4 Tv	 4
 Select	 Ok	 5 Tv	 5
 Right	 Right	 6 Tv	 6
 Down	 Down	 7 Tv	 7
 Display	 Info	 8 Tv	 8
 Menu	 Menu	 9 Tv	 9
 Stereo	 Dual	 0 Tv	 0
 Surround	 Subt	 >10 Tv	 Guide
 SFC	 Options	 CH-	 Shift + Ch -





Original	Replacement	Original	Replacement
 Power DVD	 Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play DVD	 Play	 -	 Ch -
 I<<</>> DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 1 DVD	 1
 >>>/<<<I DVD	 >>	 2 DVD	 2
 Up	 Up	 3 DVD	 3
 Left	 Left	 4 DVD	 4
 Select	 Ok	 5 DVD	 5
 Right	 Right	 6 DVD	 6
 Down	 Down	 7 DVD	 7
 Display	 Info	 8 DVD	 8









	Original	Replacement		Original	Replacement
	9 DVD		9		
	0 DVD		0		
	>10 DVD		Guide		
	CH-		Shift + Ch -		
	CH+		Shift + Ch +		
	Disc/Deck 1/2		List		
	Muting		Mute		
	Vol-		Vol -		
	Vol+		Vol +		





Original	Replacement
 Power CD	 Power
 Power Tape	 Shift + Power
 Home Theater	 Media
 Home Theater	 Smart
 Tape	 Red
 CD	 Yellow
 Tuner/Band	 Green
 DVD	 Blue
 Play Tape	 Shift + Play
 Play CD	 Play
 I<</<< Tape	 Shift + <<
 I<</<< CD	 <<
 Stop Tape	 Shift + Stop
 Stop CD	 Stop
 >>/>>I Tape	 Shift + >>
 >>/>>I CD	 >>
 Up	 Up

Original	Replacement
 Left	 Left
 Select	 Ok
 Right	 Right
 Down	 Down
 Display	 Info
 Menu	 Menu
 Stereo	 Dual
 Surround	 Subt
 SFC	 Options
 Test	 Text
 Delay	 Format
 Level	 3D
 -	 Ch -
 +	 Ch +
 Direct Tuning/Disc Enter	 D. Menu
 1 CD-Tape	 1
 2 CD-Tape	 2






Original	Replacement	Original	Replacement
3 CD-Tape	3		
4 CD-Tape	4		
5 CD-Tape	5		
6 CD-Tape	6		
7 CD-Tape	7		
8 CD-Tape	8		
9 CD-Tape	9		
0 CD-Tape	0		
>10 CD-Tape	Guide		
CH-	Shift + Ch -		
CH+	Shift + Ch +		
Disc/Deck 1/2	List		
Disc/Deck 1/2	Shift + List		
Muting	Mute		
Vol-	Vol -		
Vol+	Vol +		





Original	Replacement	Original	Replacement
 Power VCR	 Power	 Display	 Info
 Power Tuner/Band	 Shift + Power	 Menu	 Menu
 Home Theater	 Media	 Stereo	 Dual
 Home Theater	 Smart	 Surround	 Subt
 Tape	 Red	 SFC	 Options
 CD	 Yellow	 Test	 Text
 Tuner/Band	 Green	 Delay	 Format
 DVD	 Blue	 Level	 3D
 Play	 Play	 -	 Ch -
 I<</<<	 <<	 +	 Ch +
 Stop	 Stop	 Direct Tuning/Disc Enter	 D. Menu
 >>/>>I	 >>	 1 VCR	 1
 Up	 Up	 1 Tuner/Band	 Shift + 1
 Left	 Left	 2 VCR	 2
 Select	 Ok	 >10 VCR	 Guide
 Right	 Right	 2 Tuner/Band	 Shift + 2
 Down	 Down	 3 VCR	 3





Original	Replacement
 3 Tuner/Band	 Shift + 3
 4 VCR	 4
 4 Tuner/Band	 Shift + 4
 5 VCR	 5
 5 Tuner/Band	 Shift + 5
 6 VCR	 6
 6 Tuner/Band	 Shift + 6
 7 VCR	 7
 7 Tuner/Band	 Shift + 7
 8 VCR	 8
 8 Tuner/Band	 Shift + 8
 9 VCR	 9
 9 Tuner/Band	 Shift + 9
 0 VCR	 0
 0 Tuner/Band	 Shift + 0
 CH-	 Shift + Ch -
 CH+	 Shift + Ch +

Original	Replacement
 Disc/Deck 1/2	 List
 Muting	 Mute
 Vol-	 Vol -
 Vol+	 Vol +
>10 button" data-bbox="505 320 537 355"/> >10	 Shift + Guide

