




















Original	Replacement
	Power
	Red / Timer
	Red / Timer
	Green / O
	Yellow / [<>]
	Yellow / [<>]
	Blue / I-II
	Blue / I-II
	[≡]
	[+]
	[:≡]
	[?]
	Smart ♪
	Smart Picture
	Up
	Left
	OK

Original	Replacement
	Right
	Down
	Menu
	[]
	Vol+
	A/CH
	P+
	Vol-
	Mute
	P-
	1
	2
	3
	4
	5
	6
	7



