 








 






 




	Original	Replacement		Original	Replacement
	Power		Power		Exit
	Mute		Mute		Up / CH+
	1		1		Up / CH+
	2		2		Down / CH-
	3		3		Down / CH-
	4		4		Right / V+
	5		5		Right / V+
	6		6		Left / V-
	7		7		Left / V-
	8		8		OK / Group
	9		9		<<
	0		0		>>
	FAV		Pre Ch		I<<
	Recall		Back		>>I
	Menu		Menu		Filelist
	EPG		Guide		Filelist
	Info		Info		Rec



