

 
 

 


 





 
 











 

 
 







 



 

 





 
 





 











 













 

 






Original	Replacement	Original	Replacement
 System Power	 Power	 3	 3
 Sleep	 Sleep	 4	 4
 Disc Skip	 Shift + Smart	 5	 5
 CD	 Yellow	 6	 6
 Play	 Play	 7	 7
 Pause	 Pause	 8	 8
 Stop	 Stop	 9	 9
 I<<	 I<<	 10	 0
 >>I	 >>I	 11	 Guide
 Tape	 Green	 12	 Pre Ch
 Shift	 Menu	 13	 AV
 Select 10	 Info	 14	 Format
 P.File	 Ch +	 15	 3D
 Tuner	 Blue	 16	 Back
 Phono	 Red	 Video 1	 Smart
 1	 1	 Video 2	 Media
 2	 2	 Video 3	 Shift + Media





Original	Replacement	Original	Replacement
 DBFB	 Options		
 EQ Rec	 TV/R		
 Direct	 Text		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Mode /L/R/L+R	 Ok		
 Surround	 Dual		
 Effect	 Subt		
 Vol+	 Vol +		
 Vol-	 Vol -		










 



 




 



 
 



 


 




 

 
 

 





Original	Replacement
<< Deck A	<<
>> Deck A	>>
Stop Deck A	Stop
< Deck A	Left
Deck A >	Right
System Power	Power
Vol+	Vol +
Vol-	Vol -
Pause Deck A	Pause
O Deck A	Play
Rec Deck A	Rec
<< Deck B	I<<
>> Deck B	>>I
< Deck B	+ Shift + Left
Deck B >	+ Shift + Right
Stop Deck B	+ Shift + Stop
Pause Deck B	+ Shift + Pause

Original	Replacement
O Deck B	Text
Rec Deck B	AV
CD	Yellow
Tape	Green
Tuner	Blue
Phono	Red
Video 1	Smart
Video 2	Media
Video 3	+ Shift + Media





Original	Replacement	Original	Replacement
 System Power	 Power	 Vol+	 Vol +
 CD	 Yellow	 Vol-	 Vol -
 Tape	 Green	 Shift	 Menu
 Tuner	 Blue	 Video 3	 Shift + Media
 Phono	 Red		
 Video 1	 Smart		
 Video 2	 Media		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 10	 0		





Original		Replacement		Original		Replacement	
	Select 10		Info		Tuner		Blue
	P.File		Ch +		Phono		Red
	1/Hall		1		Video 1		Smart
	2/Orchestra		2		Video 2		Media
	3/Theater		3		Video 3	+	Shift + Media
	4/Simulated		4				
	5/Jazz Club		5				
	6/Gym		6				
	7/Disco		7				
	8/BGM		8				
	9/WM		9				
	10/Car		0				
	Vol+		Vol +				
	Vol-		Vol -				
	System Power		Power				
	CD		Yellow				
	Tape		Green				

