


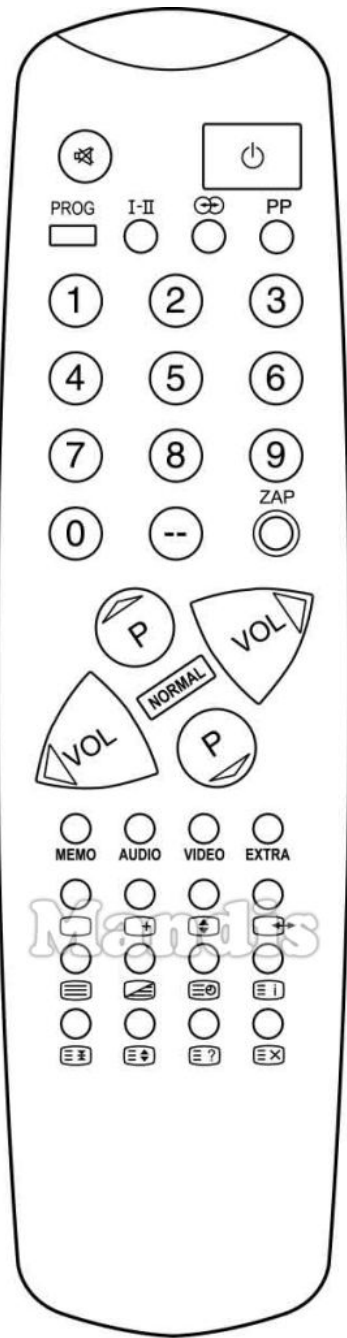

Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		ZAP		Smart / List
	Power		Power		Up / P+		Up
	Prog		TV/Radio /		Up / P+		CH+ / Page+
	I-II		Audio / Lang I/II		Right / Vol+		Right
	O to O		Sound / Title		Right / Vol+		Vol+
	PP		Back / Return		Left / Vol-		Left
	1		1		Left / Vol-		Vol-
	2		2		Normal		OK
	3		3		Down / P-		Down
	4		4		Down / P-		CH- / Page-
	5		5		Red / Memo		Red / Netflix / Search
	6		6		Green / Audio		Green / APP / Repeat
	7		7		Green / Audio		Shift + Audio / Lang I/II
	8		8		Yellow / Video		Yellow / YouTube / Repeat
	9		9		Blue / Extra		Blue / Prime Video / Random
	0		0		[]		Display / Media
	--		Guide / EPG / --		[+]		Stop / Hold





Original	Replacement	Original	Replacement
	OPT-TOOLS SETUP Setup / OPT /		
	TOP MENU D.MENU D.Menu / Top		
	GOTO TEXT Text / Goto		
	SHIFT + GOTO TEXT Shift + Text /		
	EQ SUBTITLE Subtitle / EQ		
	ANGLE INFO Info / Angle		
	STEP-FREEZE II Pause / Step / Freeze		
	SIZE ZOOM Zoom / Size		
	RDS AV INPUT AV / Input / RDS		
	CLEAR EXIT Exit / Cancel / Clear		

Original	Replacement	Original	Replacement

