 





 


 






 







 

 

 



 
 
 
 




Original		Replacement		Original		Replacement	
	Power		Power		Yellow		Yellow
	Input		AV				
	Menu		Menu				
	Up		Up				
	Down		Down				
	Right		Right				
	Left		Left				
	Enter		Ok				
	Vol+		Vol +				
	Vol-		Vol -				
	Mute		Mute				
	Return		Back				
	Display		Info				
	Mode		Smart				
	Size		Format				
	Red		Red				
	Green		Green				

