








 



















 

 



 



















 

 





 

 

 




Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Audio		Dual
	P.M.		Smart
	Info		Info
	Input		AV
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+ / Enter		Right
	Left / Vol-		Left
	Left / Vol-		Vol -
	Right / Vol+ / Enter		Vol +
	Right / Vol+ / Enter		Ok
	Menu		Menu
	Page+		>>
	Page-		<<
	Display		Shift + Info
	Exit		Exit
	Red		Red





	Original	Replacement	Original	Replacement
	Green	 B Green		
	Yellow	 C Yellow		
	Blue	 D Blue		
	Size	 ZOOM Eject		
	Stop	 Stop		
	Reveal	 SEARCH TV/R TV/R		
	Index	 SETTINGS OPT Options		
	4:3 / 16:9	 PICTURE FORMAT Format		
	C.Lock	 APP MEDIA Media		
	Sub.PG	 AD SUBT Subt		
	On/Mix/Off	 REPEAT TEXT Text		

