 















 


 
 




Original		Replacement		Original		Replacement	
	Power		Power		>>		>>
	Mute		Mute		>>		>>
	Open/Close		Eject		Stop		Stop
	1		1		Play		Play
	2		2		Pause		Pause
	3		3		Guide		Guide
	4		4		Rec		Rec
	5		5		PR List		List
	6		6		Timer Rec		AV
	7		7		PR+		Ch +
	8		8		PR-		Ch -
	9		9		Home		Smart
	0		0		Music ID		Dual
	Clear		Shift + Exit		Info/Display		Info
	Repeat/Tv/Radi		TV/R		Return		Back
	<<		<<		Title/PopUp		Media
	<<		<<		Disc Menu/Rec.		Menu



