

 

 








 

 












 

 
 
 







Original	Replacement	Original	Replacement
 Power	 Power	 Title	 Media
 Display	 Info	 Up	 Up
 N/P	 Pre Ch	 Left	 Left
 Open / Close	 Eject	 Enter	 Ok
 Language	 Dual	 Right	 Right
 Angle	 Format	 Down	 Down
 Subtitle	 Subt	 Setup	 Options
 Prog	 Sleep	 PBC	 Red
 Key b	 Ch -	 A/B	 TV/R
 Key #	 Ch +	 Repeat	 Text
 Return	 Back	 L/R	 Green
 View	 3D	 RAN	 Yellow
 Mute	 Mute	 Volume+	 Vol +
 PDVD	 Smart	 Volume-	 Vol -
 Time	 AV	 Step	 Shift + Pause
 Zoom	 Shift + Eject	 Resume	 Shift + Stop
 Menu	 Menu	 1	 1





	Original	Replacement		Original	Replacement
	2		2		Pause
	3		3		Slow
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0/10		0		
	10+		Guide		
	Clear / EQ		Exit		
	REV		<<		
	FWD		>>		
	Prev		I<<		
	Next		>>I		
	Stop		Stop		
	Play		Play		

