

 

 

 
 
 

 
 
 
 



 

 

 

 











 

 



 

 

 



 










 
 
 
 
 

 
 




Original	Replacement
 Power	 Power
 Mute	 Mute
 UHF	 Smart
 Pause	 Pause
 EPG	 Guide
 A-Z	 Media
 FAV	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 TV/Radio	 TV/R
 Menu	 Menu
 Back	 Back
 Exit	 Exit
 Info	 Info
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Red / FTA/CAS	 Red
 Green / SAT	 Green
 Yellow / TV/SAT	 Yellow





Original		Replacement		Original	Replacement
	Blue / A/V		Blue		
	Page+ / +100		>>		
	Page- / -100		<<		
	-		<<		
	+		>>		
	F1 / Zoom		Eject		
	F2 / Sleep		Sleep		
	F3 / PIP		Format		
	F4 / Back		Options		
	F1 / Zoom		Shift + 1		
	F2 / Sleep		Shift + 2		
	F3 / PIP		Shift + 3		
	F4 / Back		Shift + 4		
	Text		Text		
	Subtitle		Subt		

