



 
 


 


 

 




Original	Replacement	Original	Replacement
 Power	 Power	 FAV	 Shift + Pre Ch
 <<[]>>	 <<	 VCR/DBS	 Media
 Mute	 Mute	 Page+	 >>
 1	 1	 Page+	 Shift + Ch +
 2	 2	 Page-	 <<
 3	 3	 Page-	 Shift + Ch -
 4	 4	 Edit	 Options
 5	 5	 Guide	 Guide
 6	 6	 SAT	 AV
 7	 7	 Info	 Info
 8	 8	 Red / Pause	 Red
 9	 9	 Red / Pause	 Pause
 0	 0	 Green / Zoom	 Green
 Find	 Shift + TV/R	 Green / Zoom	 3D
 Recall	 Pre Ch	 Yellow / T/Text	 Yellow
 TV/DBS	 Smart	 Yellow / T/Text	 Text
 TV/Radio	 TV/R	 Blue / Timer	 Blue





Original	Replacement	Original	Replacement
 Blue / Timer	 +  Shift + AV	 PIP	 Format
 Up / CH+	 Up	 Multifeed	 Sleep
 Up / CH+	 Ch +	 [[+]]	 Play
 Down / CH-	 Down	 <<[]>>	 >>
 Down / CH-	 Ch -	 F1	 +  Shift + 1
 Right / Vol+	 Right	 F2	 +  Shift + 2
 Right / Vol+	 Vol +	 F3	 +  Shift + 3
 Left / Vol-	 Left		
 Left / Vol-	 Vol -		
 OK / List	 Ok		
 OK / List	 List		
 Menu / Back	 Menu		
 Menu / Back	 Back		
 Exit	 Exit		
 Subtitle	 Subt		
 Audio	 Dual		
 Signal	 D. Menu		

