



Original	Replacement
Standby / On	Power
Sleep	Sleep / Timer
INPUT PREV.	CH- / Page-
INPUT NEXT	CH+ / Page+
NETWORK	Shift + 7
iPod / USB	Shift + 8
ADAPTER	Shift + 4
BD	Shift + 9
DVD	Shift + 2
DVR / BDR	Shift + 5
SAT / CBL	Shift + Fav / Marker / PC
GAME	Shift + Guide / EPG / -/-
HDMI	Shift + 0
CD	Shift + 3
TV	Shift + 1
TUNER	Shift + 6
Auto / Direct	Red / Netflix / Search

Original	Replacement
ALC /	Green / APP / Repeat
Adv. Surr.	Yellow / YouTube / Repeat
ECO	Blue / Prime Video / Random
Audio	Audio / Lang I/II
Up	Up
Tune+	Shift + >> /
Tools Menu	Setup / OPT /
Volume+	Vol+
Left	Left
Preset -	Shift + I<< / Preset-
Enter	OK
Right	Right
Preset+	Shift + >>I / Preset+
Down	Down
Tune-	Shift + <<I /
Volume-	Vol-
Home Menu	Menu / Home





Original	Replacement
iPod Ctrl.	D.Menu / Top
PTY	Info / Angle
Return	Back / Return
BAND	TV/Radio /
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Play	Play / Slow
Mute	Mute / Dimmer
I<<	I<< / Preset-
BASS DOWN	Shift + Down
>>I	>>I / Preset+
BASS UP	Shift + Up
<<	<< / Tune-
TREBLE DOWN	Shift + Left
>>	>> / Tune+
TREBLE UP	Shift + Right
1	1

Original	Replacement
PHASE	Subtitle / EQ
2	2
3	3
Signal Sel.	Guide / EPG / -/-
DISP	Display / Media
4	4
Auto S.RTRV	Sound / Title
5	5
SB CH	Eject / Surround
6	6
CHANNEL	Smart / List
Repeat	Shift + Green / APP /
7	7
Midnight	Picture / Format
Speakers	Zoom / Size
8	8
9	9



