








 
 

 







 


 
 

 
 

 
 




 




 

 
 




 
 




	Original	Replacement		Original	Replacement
	Power		Power		Tv Display
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Enter
	5		5		Vol+
	6		6		Vol-
	7		7		S.M.
	8		8		P.M.
	9		9		CH+
	0		0		CH-
	.		Shift + Guide		EPG Page Up
	Recall		Back		EPG Page Down
	Menu		Menu		Sleep
	Source		AV		P.G.
	Exit		Exit		Aspect
					Info
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Smart
					Media
					Ch +
					Ch -
					Shift + Up
					Shift + Down
					Sleep
					Format
					3D





Original

Replacement

	CH List		List
	EPG		Guide
	FAV		Pre Ch
	DTV Strengh		D. Menu
	TV		TV/R
	AV		Eject
	HDMI		Text
	YPbPr		Shift + Format
	CC		Subt
	MTS/SAP		Dual
	VGA		Options
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original

Replacement

