





Original		Replacement		Original		Replacement	
	Power		Power		Text		Text
	Audio		Dual		Exit		Exit
	Mute		Mute		Up		Up
	1		1		Left		Left
	2		2		OK		Ok
	3		3		Right		Right
	4		4		Down		Down
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		PG-		Ch -
	8		8		PG+		Ch +
	9		9		Red / Last		Red
	0		0		Green		Green
	TV/Radio		TV/R		Yellow		Yellow
	EPG		Guide		Blue / Mode		Blue
	Menu		Menu		Find		Shift + TV/R
	Sub-T		Subt		Info		Info





Original		Replacement		Original		Replacement	
	M/P		Options				
	Favor		Pre Ch				
	Skip-		I<<				
	Skip+		>>I				
	F.Rwd		<<				
	F.Fwd		>>				
	Slow		Shift + Play				
	Play/Pause		Play				
	Play/Pause		Pause				
	Stop		Stop				
	USB		Media				

