


 







 




 



 





 











 



 

 

 
 
 
 







 


 







Original	Replacement	Original	Replacement
 Power	 Power	 Pause/Still	 Info
 Eject	 Eject	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 i	 Menu
 3	 3	 AV	 AV
 4	 4	 Clear	 Exit
 5	 5	 TV/VCR	 TV/R
 6	 6	 OK	 Ok
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Lock	 Shift + Stop	 ez REPEAT	 Text
 Rec ITR	 Red	 CM Skip	 Sleep
 LP	 Options	 ez POWER OFF	 Subt
 REW	 <<	 *	 Format
 FF	 >>		

