



Original	Replacement
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/Sat	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+	Vol +
Vol-	Vol -
CH/Tuner Up	Ch +
CH/Tuner Down	Ch -
Speaker 1	Options
Speaker 2	Dual





Original	Replacement
 Sleep	 Sleep
 Dim	 TV/R
 P.Scan	 Text
 A.Preset	 AV
 MEM	 Format
 RDS	 Subt
 Prev.CH	 Pre Ch
 I<	 I<<
 <<	 <<
 >>	 >>
 >I	 >>I
 Stop	 Stop
 Play	 Play
 Pause	 Pause
 Phono	 Shift + 1
 FM/AM	 Shift + 2
 USB	 Shift + 3

Original	Replacement
 Bluetooth	 Shift + 4
 vTuner	 Shift + 5
 Network	 Shift + 6
 AUX	 Shift + 7
 Digital	 Shift + 8





Original	Replacement
Power On	Power
Power Off	Shift + Power
Left	Left
Right	Right
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
Stereo	Dual

Original	Replacement
Cable/Sat	Green
CD	Yellow
TV	Blue
Mute	Mute



 


Original	Replacement
Power On	Power
Power Off	Shift + Power
Mute	Mute
Stereo	Shift + Dual
Cable/SAT	Green
TV	Blue
CD	Yellow
Menu	Menu
Harman Volume	Smart
Exit	Exit
Tone Control	Back
Up	Up
Down	Down
Right	Right
Left	Left
OK	Ok
1	1

Original	Replacement
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Shift + Exit
Direct	Guide
Vol+ Stereo	Vol +
Vol- Stereo	Vol -
CH/Tuner Down	Ch +
CH/Tuner Up	Ch -
Speaker 1	Options
Speaker 2	Dual





Original		Replacement		Original		Replacement	
	Sleep		Sleep				
	DIM		TV/R				
	P.Scan		Text				
	A.Preset		AV				
	MEM		Format				
	RDS		Subt				
	Prev.CH		Pre Ch				
	I<		I<<				
	<<		<<				
	>>		>>				
	>I		>>I				
	Stop		Stop				
	Play		Play				
	Pause		Pause				

