




 
 

 


 



 
 


 
 
 

 
 

 

 


 
 

 
 



 
 


 
 


 
 


 



 



 



 



 




Original		Replacement		Original		Replacement	
	On / Standby		Power		Left		Left
	1		1		Enter		Ok
	2		2		Video / AUX		Red
	3		3		Tuner / Band		Green
	4		4		CD		Yellow
	5		5		Tape		Blue
	6		6		>> / Preset Up / >>		Ch +
	7		7		<< / Preset Down / <<		Ch -
	8		8		MP3 Navigation		Media
	9		9		Character		Smart
	0		0		MP3 Display		Info
	+10		Guide		Equalizer Mode		Dual
	Vol +		Vol +		X-Bass		Subt
	Vol -		Vol -		Clock / Timer		Menu
	Up		Up		Clear / Dimmer		Exit
	Down		Down		Random CD		Back
	Right		Right		Pause CD		Pause





Original		Replacement		Original		Replacement	
	Play CD		Play				
	Stop CD		Stop				
	Memory CD		3D				
	< Tape		<<				
	Tape >		>>				
	Stop Tape		Shift + Stop				
	Rec / Pause Tape		Rec				
	Disc Select 1		Shift + 1				
	Disc Select 2		Shift + 2				
	Disc Select 3		Shift + 3				
	Disc Select 4		Shift + 4				
	Disc Select 5		Shift + 5				

