



Original	Replacement
	Mute / Dimmer
	Shift + Power
	Power
	Picture / Format
	Info / Angle
	Smart / List
	Sleep / Timer
	Text / Goto
	Set up / OPT /
	AV / Input / RDS
	Shift + Guide / EPG / -/-
	D. Menu / Top
	Zoom / Size
	<< / Tune-
	Play / Slow
	>> / Tune+
	Shift + CH+ /

Original	Replacement
	Display / Media
	Shift + CH- /
	Stop / Hold
	Pause / Step / Freeze
	Rec / Rec Mode
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/-
	0
	Back / Return





	Original	Replacement	Original	Replacement
	Red	 Red / Netflix / Search		
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Up	 Up		
	Left	 Left		
	OK	 OK		
	Right	 Right		
	Down	 Down		
	Vol +	 Vol +		
	Progr +	 CH+ / Page+		
	Menu	 Menu / Home		
	Vol -	 Vol -		
	Progr -	 CH / Page-		



