















 


 


 















 

Original	Replacement	Original	Replacement
Power	Power	DAT/Tape Mon	5
<<	<< / Tune-	8	8
>>	>> / Tune+	VCR-1	4
Stop	Stop / Hold	VCR-2/V.AUX	7
Play	Play / Slow	11/O	0
I<</Volume-	I<< / Preset-	12/E	Fav / Marker / PC
>>I/Volume+	>>I / Preset+	RF Auto/Manual	Subtitle / EQ
Pause	Pause / Step / Freeze	Analog/Digital	Audio / Lang I/II
</Disc Skip+	Rec / Rec Mode	Mode	Sound / Title
Shift	Smart / List	Master Vol+	Vol+
Channel-	CH- / Page-	Cursor Left	Left
Channel+	CH+ / Page+	Enter	OK
Phono	9	Cursor Right	Right
CD	3	Master Vol-	Vol-
Tuner	6	Tuning Up	Shift + >> /
DVD/VDP	2	Cursor Up	Up
TV/DBS	1	Tuning Down	Shift + << /

Tune-





Original	Replacement
 Cursor Down	 Down
 Muting	 Mute / Dimmer
 Band	 Shift + Stop /
 RDS	 AV / Input / RDS
 Output	 Display / Media
 T.Tone	 Blue / Prime Video / Random
 Mode Tuner	 Shift + Play /
 PTY	 Shift + Preset-
 Rec Select	 Shift + Smart / List
 CH Select	 Yellow / YouTube / Repeat
 Memory	 Shift + Pause / Step /
 RT	 Shift + >>1 / Preset+
 Video Select	 Picture / Format
 CH Vol+	 Green / APP / Repeat
 Panel	 D.Menu / Top
 Dimmer	 Shift + Mute / Dimmer
 On Screen	 Shift + Display / Media

Original	Replacement
 CH Vol-	 Red / Netflix / Search

