

 






 
 
 
 
 
 
 


 
 
 
 

 




 

 
 



Original	Replacement	Original	Replacement
Power ON/Off	 Power	Prev.	 I<<
Mute	 Mute	Volume-	 Vol -
Stop	 Stop	Next	 >>I
Vol Rs-/Effect	 Ch -	Tape 1 Hall/Ats	 Media
Sleep	 Sleep	Pr 1	 1
CD Random	 TV/R	Pr 2	 2
Tape 2 Pre./eq	 D. Menu	Pr 3	 3
Repeat	 Text	Pr 4	 4
Vol Rs+/S.Mode	 Ch +	Pr 5	 5
Play	 Play	Pr 6	 6
CD/Theater	 List	Pr 7	 7
Display	 Info	Pr 8	 8
Rewind	 <<	Pr 9	 9
F.FWD	 >>	Mode	 Guide
Pause	 Pause	Pr 0/10	 0
Woofers/Speed	 Back	Program	 Menu
Volume+	 Vol +		

