




 

 

 
 
 

 





 

 






 









 
 
 

 

 



 

 
 







 


 









Original		Replacement		Original		Replacement	
	Standby		Power		Open/Close		Eject
	DVD		Smart		Tv/Video		TV/R
	HDD		Media		Guide		Guide
	1		1		Info		Info
	2		2		Enter		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		Menu		Menu
	8		8		Top Menu		Shift + Menu
	9		9		Cancel		Exit
	0		0		Navigation		List
	Vol+ Tv		Vol +		Return		Back
	Vol- Tv		Vol -		Edit		Text
	PR+		Ch +		Prog		Sleep
	PR-		Ch -		I<</Day(-)		I<<





Original	Replacement	Original	Replacement
 >> /Day(+)	 >>	 Rec	 Rec
 Play	 Play	 Angle/Live Check	 D. Menu
 Stop/Clear	 Stop	 Standby Tv	 Shift + Power
 Pause	 Pause	 Tv/Video Tv	 Shift + TV/R
 <</Slow-	 <<	 Live	 3D
 >>/Slow+	 >>	 ?/Help	 Pre Ch
 Memo/Mark	 AV	 PR+ Tv	 Shift + Ch +
 Red/Display	 Red	 PR- Tv	 Shift + Ch -
 Green/On	 Green	 Prog Tv	 Shift + Sleep
 Yellow/Recall	 Yellow	 1 Tv	 Shift + 1
 Blue/→	 Blue	 2 Tv	 Shift + 2
 Audio	 Dual	 3 Tv	 Shift + 3
 Subtitle/VPS/PDC/Timer	 Subt	 4 Tv	 Shift + 4
 Format/Output	 Format	 5 Tv	 Shift + 5
 Dubbing	 Shift + Options	 6 Tv	 Shift + 6
 Setup	 Options	 7 Tv	 Shift + 7
 Rec	 Shift + Rec	 8 Tv	 Shift + 8

Original	Replacement	Original	Replacement
 Rec	 Rec	 Angle/Live Check	 D. Menu
 Standby Tv	 Shift + Power	 Tv/Video Tv	 Shift + TV/R
 Live	 3D	 ?/Help	 Pre Ch
 PR+ Tv	 Shift + Ch +	 PR- Tv	 Shift + Ch -
 Prog Tv	 Shift + Sleep	 1 Tv	 Shift + 1
 2 Tv	 Shift + 2	 3 Tv	 Shift + 3
 4 Tv	 Shift + 4	 5 Tv	 Shift + 5
 6 Tv	 Shift + 6	 7 Tv	 Shift + 7
 8 Tv	 Shift + 8		



Mode/Remain



