


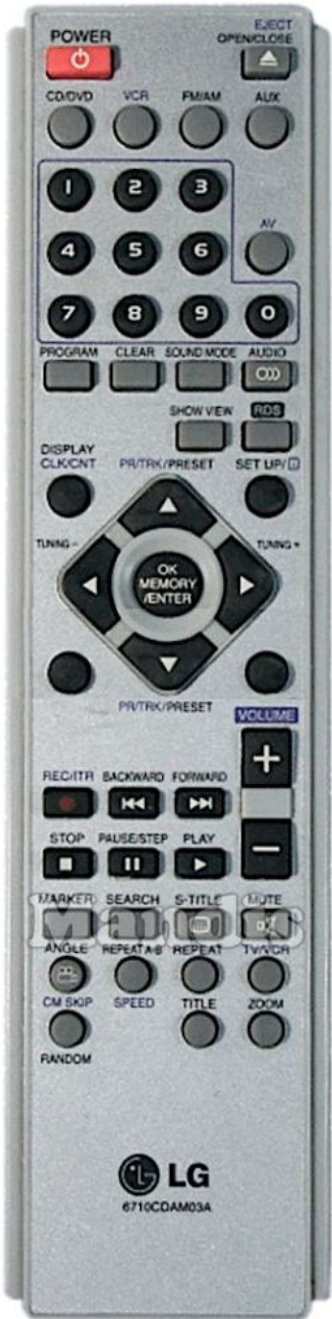

Original	Replacement
Power	Power
Eject / Open/Close	Eject
CD/ DVD	Shift + 1
VCR	Shift + 2
FM/ AM	Shift + 3
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV
Program	Sleep

Original	Replacement
Clear	Exit
Sound Mode	Shift + Dual
Audio	Dual
Show View	Media
RDS	List
Display / CLK/ CNT	Info
Set up / i	Options
Set up / i	Menu
Up / PR/ TRK + / Preset +	Up
Up / PR/ TRK + / Preset +	Ch +
Left / Tuning	Left
Right / Tuning	Right
OK / Memory /	Ok
Down / PR/ TRK - Preset -	Down
Down / PR/ TRK - Preset -	Ch -
Return	Back
Disc Menu	D. Menu





Original	Replacement
Power	Power
Eject	Eject
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV
Program	Sleep
Clear	Exit
Audio	Dual
Show View	Media

Original	Replacement
Display/CLK/CNT	3D
Set up	Info
Up	Up
PR/TRK+	Ch +
PR/TRK-	Ch -
Down	Down
Right	Right
Left	Left
OK/Enter	Ok
Return	Back
Disc Menu	D. Menu
Rec/ITR	Rec
I <<	I <<
<<	<<
>>	>>
>>	>>
Stop	Stop



