



Original	Replacement
 Standby	 Power
 Source	 AV / Input / RDS
 Home	 Shift + Menu /
 e	 Smart / List
 Mouse	 Info / Angle
 TV / Radio	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Display	 Display / Media
 0	 0

Original	Replacement
 Recall	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Play/Pause / Timeshift	 Play / Slow
 Play/Pause / Timeshift	 Pause / Step / Freeze
 Down	 Down
 Stop / EPG	 Guide / EPG / -/-
 Stop / EPG	 Stop / Hold
 Vol +	 Vol+
 TXT	 Text / Goto
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Mute	 Mute / Dimmer





Original	Replacement
CH -	CH PAGE CH- / Page-
FAVLIST MIX	PC FAV MARKER Fav / Marker / PC
SUBTITLE SIZE	EQ SUBTITLE Subtitle / EQ
AUDIO CANCEL	LANG I/II AUDIO Audio / Lang I/II
RECORD	REC MODE Rec / Rec Mode
INDEX <<	TUNE- << << / Tune-
HOLD >>	TUNE+ >> >> / Tune+
REVEAL I<<	PRESET- I<< I<< / Preset-
SUBPAGE >>I	PRESET+ >>I >>I / Preset+
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

Original	Replacement

