 
 
 

 


 


 
 













 


 
 














 

















Original	Replacement	Original	Replacement
	★ Fav / Marker / PC		>> / Tune+
	POWER Power		Home Menu / Home
	MUTE Mute / Dimmer		BACK Back / Return
	GREEN / F2 Green / APP / Repeat		UP Up
	YELLOW / F3 Yellow / YouTube / Repeat		LEFT Left
	BLUE / F4 Blue / Prime Video / Random		OK OK
	RED / F1 Red / Netflix / Search		RIGHT Right
	Rec Rec / Rec Mode		DOWN Down
	APP Shift + Green / APP /		i Info / Angle
	Sound Mode		VOL+ Vol+
	SETUP Setup / OPT /		: ≡ D.Menu / Top
	TV Shift + 1		PLAY/PAUSE Play / Slow
	≡ Smart / List		VOL- Vol-
	KB Display / Media		PLAY/PAUSE Pause / Step / Freeze
	I<< I<< / Preset-		CHAN.+ CH+ / Page+
	>>I >>I / Preset+		STOP Stop / Hold
	<< << / Tune-		1 1





Original	Replacement	Original	Replacement
	2		2
	CHAN.-		CH- / Page-
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Format		Picture / Format
	0		0
	Recall / Del		Exit / Cancel / Clear

