


















 

 



 


| Original | Replacement | Original | Replacement |
|----------|---|-------------|---|
| Power |  Power | 2 |  2 |
| Mute |  Mute / Dimmer | 3 |  3 |
| Play |  Play / Slow | 4 |  4 |
| Pause |  Pause / Step / Freeze | 5 |  5 |
| Stop |  Stop / Hold | 6 |  6 |
| << |  << / Tune- | 7 |  7 |
| >> |  >> / Tune+ | 8 |  8 |
| I<< |  I<< / Preset- | 9 |  9 |
| >>I |  >>I / Preset+ | 0 |  0 |
| XDSS |  Sound / Title | Repeat |  Green / APP / Repeat |
| EQ PATT. |  Subtitle / EQ | Preset Down |  Shift + I<< / Preset- |
| Sleep |  Sleep / Timer | Preset Up |  Shift + >>I / Preset+ |
| Program |  TV/Radio / | Tuner/Band |  Shift + 6 |
| MP3 Info |  Info / Angle | AUX |  Shift + 7 |
| Vol+ |  Vol+ | | |
| Vol- |  Vol- | | |
| 1 |  1 | | |

