







































































Original		Replacement		Original		Replacement	
	Power		Power		i		Info / Angle
	1		1		Back		Back / Return
	2		2		•		Rec / Rec Mode
	3		3		Menu		Menu / Home
	4		4		Guide		Guide / EPG / -/-
	5		5		P+		CH+ / Page+
	6		6		P-		CH- / Page-
	7		7		↑		Shift + CH+ /
	8		8		↑		>>I / Preset+
	9		9		↓		Shift + CH- /
	0 / □		0		↓		I<< / Preset-
	0 / □		Display / Media		Up		Up
	Exit / TV/Radio		TV/Radio /		Left		Left
	Exit / TV/Radio		Exit / Cancel / Clear		OK		OK
	Mute		Mute / Dimmer		Right		Right
	Vol-		Vol-		Down		Down
	Vol+		Vol+		Green / Option		Setup / OPT /



