




Original	Replacement	Original	Replacement
 Power	 Power	 Vieta Cast	 Smart / List
 Open/Close	 Eject / Surround	 I<< Skip	 I<< / Preset-
 1	 1	 Skip >>I	 >>I / Preset+
 2	 2	 << Slow/Search	 << / Tune-
 3	 3	 Slow/Search >>	 >> / Tune+
 4	 4	 Stop	 Stop / Hold
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Play	 Play / Slow
 7	 7	 Status	 Text / Goto
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 Option	 Shift + Setup / OPT / Tools
 0	 0	 Return	 Back / Return
 Cancel	 Shift + Exit / Cancel / Clear	 Top Menu / Direct Navigator	 D.Menu / Top
 Audio	 Audio / Lang I/II	 Pop-Up Menu	 Shift + Menu / Menu
 Receiver Vol+	 Vol+	 Function Menu	 Menu / Home
 Receiver Vol-	 Vol-	 Up	 Up
 Receiver Mute	 Mute / Dimmer	 Down	 Down





Original		Replacement		Original		Replacement	
	Right		Right				
	Left		Left				
	OK		OK				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Setup		Setup / OPT /				
	PIP		Picture / Format				
	Display		Display / Media				
	Select Drive		AV / Input / RDS				
	Power Tv		Shift + Power				
	AV Tv		Shift + AV / Input / RDS				
	TV Vol+		Shift + Vol+				
	TV Vol-		Shift + Vol-				
	TV CH+		CH+ / Page+				
	TV CH-		CH- / Page-				

