 



 

 





 

 

 





 























 









 

 
 
 
 
 





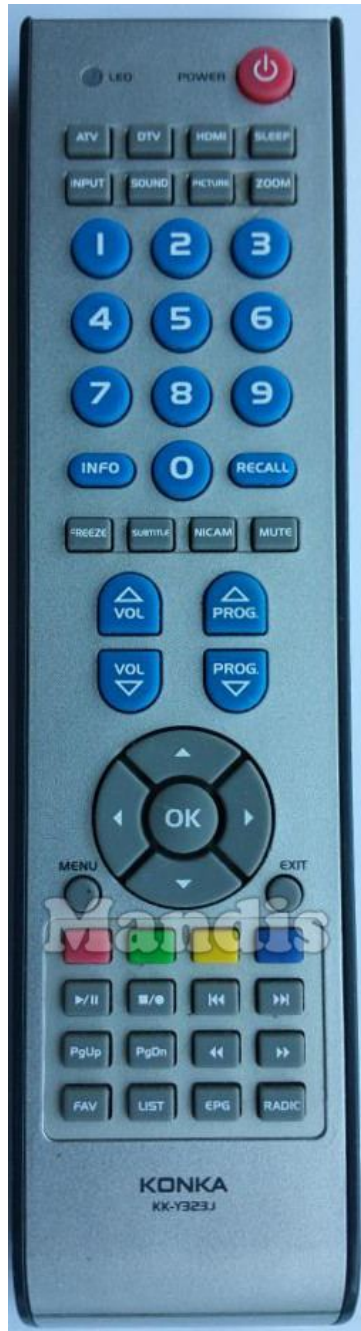 






Original	Replacement	Original	Replacement
	Power		Power
	ATV		Display / Media
	DTV		D.Menu / Top
	HDMI		Shift + 0
	Sleep		Sleep / Timer
	Input		AV / Input / RDS
	Sound		Sound / Title
	Picture		Picture / Format
	Zoom		Zoom / Size
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back / Return
	Info		Info / Angle
	Freeze		Pause / Step / Freeze
	Subtitle		Subtitle / EQ
	Nicam		Audio / Lang I/II
	Vol +		Vol+
	Vol -		Vol-
	Mute		Mute / Dimmer
	Prog +		CH+ / Page+
	Prog -		CH- / Page-
	Navegacion Subir		Up
	Navegacion Bajar		Down
	Navegacion		Right
	Navegacion		Left
	OK		OK





Original	Replacement
	 Menu / Home
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 Shift + CH+ /
	 Shift + CH- /
	 << / Tune-
	 >> / Tune+
	 Fav / Marker / PC
	 Smart / List
	 Guide / EPG / -/--

Original	Replacement
	 TV/Radio /

