
 
 

 


 

 

 

 

 

 

 

 
 
 

 




Original	Replacement	Original	Replacement
	Power		Info / Angle
	CD		Exit / Cancel / Clear
	Tuner		Sound / Title
	Tape		CH+ / Page+
	AUX		CH- / Page-
	Display Eject		Mute / Dimmer
	Power Sound		Display / Media
	I<<		Picture / Format
	>>I		Text / Goto
	<I		
	I>/Pause		
	PTY/Stop		
	CD Copy		
	Rec		
	Memory		
	+		
	-		

