



 

 

 

 

 

 

 



 














 
 











Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Noting	 Display / Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute / Dimmer
 Options	 Setup / OPT /
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 OK	 OK
 Menu	 Menu / Home
 Back	 Back / Return
 VOD	 Smart / List
 Planner	 TV/Radio /
 (i)	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze



