 



 



 















 



 





 

 



 



 

 

 





 



 

 







 

 


 

 

 







 

 

 
 
 







Original	Replacement	Original	Replacement
 Power	 Power	 Enter	 Shift + OK
 Mute	 Mute / Dimmer	 Tv	 TV/Radio /
 Right/Vol+	 Right	 Scart	 >> / Tune+
 Left/Vol-	 Left	 AV	 AV / Input / RDS
 1	 1	 PC	 Fav / Marker / PC
 2	 2	 Sleep	 Sleep / Timer
 3	 3	 Freeze	 Pause / Step / Freeze
 4	 4	 Wide	 Picture / Format
 5	 5	 Display	 Display / Media
 6	 6	 Menu	 Menu / Home
 7	 7	 e	 Info / Angle
 8	 8	 MPX	 Exit / Cancel / Clear
 9	 9	 PIP/PBP	 D.Menu / Top
 0	 0	 Up CH	 Up
 CH+	 CH+ / Page+	 Down CH	 Down
 CH-	 CH- / Page-	 Vol-	 Vol-
 Recall	 Back / Return	 Vol+	 Vol+





Original		Replacement	
	OK		OK
	Swap		Play / Slow
	Active	 + 	Shift + TV/Radio / Program
	Position		Sound / Title
	Size/Mode		Setup / OPT /
	Index	 + 	Shift + Info / Angle
	Subtitle		Subtitle / EQ
	Reveal		<< / Tune-
	Teletext		Text / Goto
	Size		Zoom / Size
	Mix	 + 	Shift + Text /
	Subpage	 + 	Shift + Subtitle / EQ
	Hold		Stop / Hold
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement

