













 





































 







 

 









Original	Replacement	Original	Replacement
	Power		Power
	Power Tv		Shift + Power
	Vol+ Tv		Vol+
	CH+ Tv		Shift + CH+ /
	Drive Select		Display / Media
	AV Input Tv		Shift + AV / Input / RDS
	Vol- Tv		Vol-
	CH- Tv		Shift + CH- /
	1		1
	2		2
	3		3
	CH/Page+		CH+ / Page+
	4		4
	5		5
	6		6
	CH/Page-		CH- / Page-
	7		7
	8		8
	9		9
	Internet		Smart / List
	Last View		Fav / Marker / PC
	0		0
	Radio/Tv		TV/Radio /
	Skipe		Shift + Smart / List
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<< Slow/Search/Rewi		<< / Tune-
	Slow/search >>		>> / Tune+
	Stop		Stop / Hold
	Pause/PAUSE LIVE		Pause / Step / Freeze
	Play		Play / Slow
	i/STATUS		Info / Angle
	X/Exit		Exit / Cancel / Clear
	Guide		Guide / EPG / -/-



