


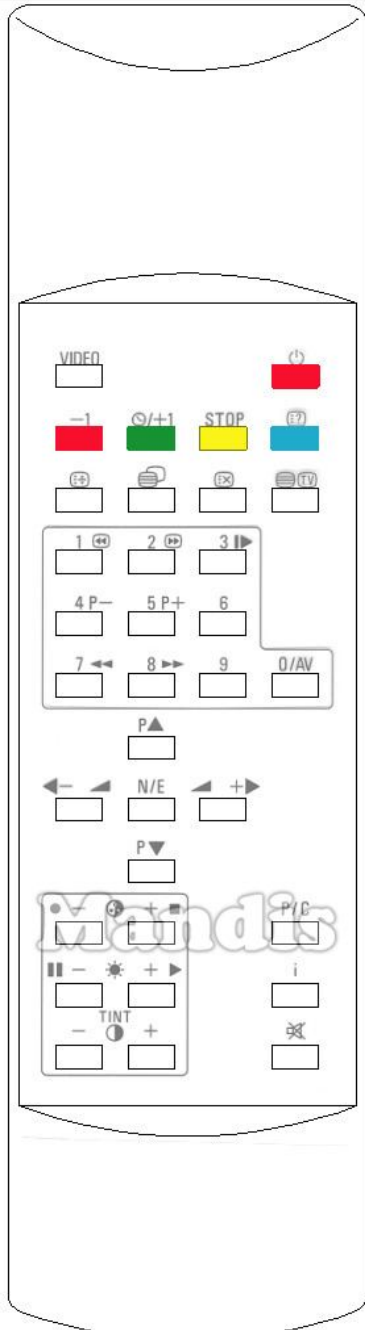





































 














Original	Replacement	Original	Replacement
	Power		9
	Red		0/AV
	Green		P+
	Yellow		P-
	Blue		Vol+
	[=+]		Vol-
	[/=]		N/E
	[=x]		Right
	[=]		Left
	1		Up
	2		Down
	3		P/C
	4		i
	5		Mute
	6		Color-
	7		Color+
	8		Brightness-
			9
			0
			CH+ / Page+
			CH- / Page-
			Vol+
			Vol-
			OK
			Right
			Left
			Up
			Down
			Back / Return
			Info / Angle
			Mute / Dimmer
			<< / Tune-
			>> / Tune+
			I<< / Preset-





Original	Replacement	Original	Replacement
 Power	 Power	 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search	 Stop	 Stop / Hold
 Green	 Green / APP / Repeat	 Pause	 Pause / Step / Freeze
 Yellow	 Yellow / YouTube / Repeat	 Play	 Play / Slow
 Blue	 Blue / Prime Video / Random	 Tint-	 Display / Media
 0/AV	 0	 Tint+	 Smart / List
 Vol+	 Vol+	 <<	 << / Tune-
 Vol-	 Vol-	 >>	 >> / Tune+
 P+	 CH+ / Page+	 I>	 Zoom / Size
 P-	 CH- / Page-	 I<<	 I<< / Preset-
 Down	 Down	 >>I	 >>I / Preset+
 Up	 Up		
 N/E	 OK		
 Right	 Right		
 Left	 Left		
 i	 Info / Angle		
 Mute	 Mute / Dimmer		

