





 



 

 



 



 

 

 

 

 

 

 



 



 



 

 



 







Original	Replacement
	Power
	Sleep / Timer
	Shift + Sleep / Timer
	Guide / EPG / -/-
	Pause / Step / Freeze
	Mute / Dimmer
	Vol-
	Vol+
	Play / Slow
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	<< / Tune-
	>> / Tune+
	AV / Input / RDS
	Picture / Format
	Zoom / Size

Original	Replacement
	Down
	Up
	CH- / Page-
	CH+ / Page+
	Left
	Right



 

 




 










 





 



 

 

 

 



 

 







 



Original		Replacement		Original		Replacement	
	Repeat		Green / APP / Repeat		Inc. Surr.		AV / Input / RDS
	Power		Power		Flat		Picture / Format
	Shuffle		Blue / Prime Video / Random		Loudness		Zoom / Size
	Program		TV/Radio /		Bass-		Down
	Sleep		Sleep / Timer		Bass+		Up
	Timer		Shift + Sleep / Timer		Treble-		CH- / Page-
	Display		Display / Media		Treble+		CH+ / Page+
	Pause		Pause / Step / Freeze		Balance L		Left
	Mute		Mute / Dimmer		Balance R		Right
	Vol-		Vol-				
	Vol+		Vol+				
	Play		Play / Slow				
	Stop		Stop / Hold				
	I<		I<< / Preset-				
	>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				





Original	Replacement
	 Power
	 +  Shift + Power
	 7
	 TV/Radio /
	 Sleep / Timer
	 +  Shift + Sleep / Timer
	 Display / Media
	 Mute / Dimmer
	 Vol-
	 Vol+
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Sound / Title

Original	Replacement
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right

