



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
List	Shift + Smart / List
Recall	Back / Return
FAV	Fav / Marker / PC
Subtitle	Subtitle / EQ
Info	Info / Angle
TTX	Text / Goto

Original	Replacement
Vol+	Vol+
Vol-	Vol-
Page+	Shift + CH+ /
Page-	Shift + CH- /
CH+	CH+ / Page+
CH-	CH- / Page-
Lang	Audio / Lang I/II
Timeshift	Smart / List
Tv/Radio	TV/Radio /
EPG	Guide / EPG / -/-
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Menu	Menu / Home
Exit	Exit / Cancel / Clear





Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>I	 >>I / Preset+
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 Timer	 Sleep / Timer
 PVR	 AV / Input / RDS
 V-Format	 Shift + 4
 Aspect	 Picture / Format

Original	Replacement

