











 



 





















 
















 



Original	Replacement	Original	Replacement
Progr/C/CH	 TV/Radio /	Slow Down	 +  Shift + Play /
Sp/Lp/Speed	 Subtitle / EQ	Slow/Dpss-	 +  Shift + Left
Video/Go-To	 +  Shift + Text /	On/Off	 +  Shift + Power
Ch.Memo	 Zoom / Size	Audio Out	 Mute / Dimmer
F.Adv	 Sound / Title	X2 Rew/Play	 +  Shift + << /
Case Tape	 Picture / Format	Next Sv+V	 +  Shift + >> / Preset+
Mon/TV	 Text / Goto	Info/Intro	 Info / Angle
Index Pict-	 +  Shift + Vol-	Timer/Sleep	 Sleep / Timer
Index Pict+	 +  Shift + Vol+	Frame Down	 +  Shift + Down
Count Remain	 +  Shift + Blue / Prime	Input Source	 AV / Input / RDS
Counter/Memor	 Blue / Prime Video / Random	Skip/Search	 Red / Netflix / Search
Counter Clock	 Yellow / YouTube / Repeat	Timer/Record	 +  Shift + Rec / Rec Mode
Slow/Dpss+	 +  Shift + Right	Play	 Play / Slow
T.Set/Clock	 Green / APP / Repeat	Syst.	 Setup / OPT /
Show View	 Fav / Marker / PC	Clear 00:00	 +  Shift + Exit / Cancel / Clear
VCR/TV	 Smart / List	Eject/Reverse	 Eject / Surround
Auto/Track	 D.Menu / Top	Tracking-	 +  Shift + CH- /

Menu

Page-



Original	Replacement	Original	Replacement
Tracking+	 +  Shift + CH+ /	Menu	 Menu / Home
Chan+	 CH+ / Page+	OK Enter	 OK
Set+	 Vol+	Pause	 Pause / Step / Freeze
Set-	 Vol-	Stop	 Stop / Hold
Chan-	 CH- / Page-	Menu Right	 Right
On/Off	 Power	Exit	 Exit / Cancel / Clear
F.Forward	 >> / Tune+	Menu Down	 Down
Rewind	 << / Tune-	Next	 >> / Preset+
Record	 Rec / Rec Mode	Audio	 Audio / Lang I/II
0	 0	Prev.	 I<< / Preset-
-/--	 Guide / EPG / -/--	1	 1
9	 9	2	 2
8	 8	3	 3
7	 7	4	 4
Menu Left	 Left	5	 5
Display	 Display / Media	6	 6
Menu Up	 Up		

