 









 

 


 



 






 


















 



 

 

 
 


Original	Replacement	Original	Replacement
 Standby	 Power	 Tv/Radio	 TV/Radio /
 Source	 AV / Input / RDS	 Info	 Info / Angle
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Menu	 Menu / Home
 8	 8	 Mute	 Mute / Dimmer
 9	 9	 Vol+	 Vol+
 FAV	 Fav / Marker / PC	 EPG	 Guide / EPG / -/--
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 P.Mode	 Picture / Format	 Media	 Display / Media
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Sleep	 Sleep / Timer	 Rec	 Rec / Rec Mode

Original	Replacement	Original	Replacement
 Tv/Radio	 TV/Radio /	 Info	 Info / Angle
 Up	 Up	 Left	 Left
 Left	 Left	 OK	 OK
 Right	 Right	 Down	 Down
 Exit	 Exit / Cancel / Clear	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 EPG	 Guide / EPG / -/--	 CH+	 CH+ / Page+
 Vol-	 Vol-	 Media	 Display / Media
 CH-	 CH- / Page-	 Rec	 Rec / Rec Mode





Original	Replacement	Original	Replacement
 T-Shift	 D.Menu / Top		 Green / APP / Repeat
 I/II/Audio	 Audio / Lang I/II		 Yellow / YouTube / Repeat
 Size/Aspect	 Shift + Zoom /		 Blue / Prime Video / Random
 Text	 Text / Goto		
 Reveal	 Setup / OPT /		
 Hold	 Shift + Stop /		
 Subpage	 Eject / Surround		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 Index/R.List	 Zoom / Size		
 Subtitle	 Subtitle / EQ		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 I<<	 I<< / Preset-		
 >>I/Mix	 >>I / Preset+		
 Red	 Red / Netflix / Search		

