


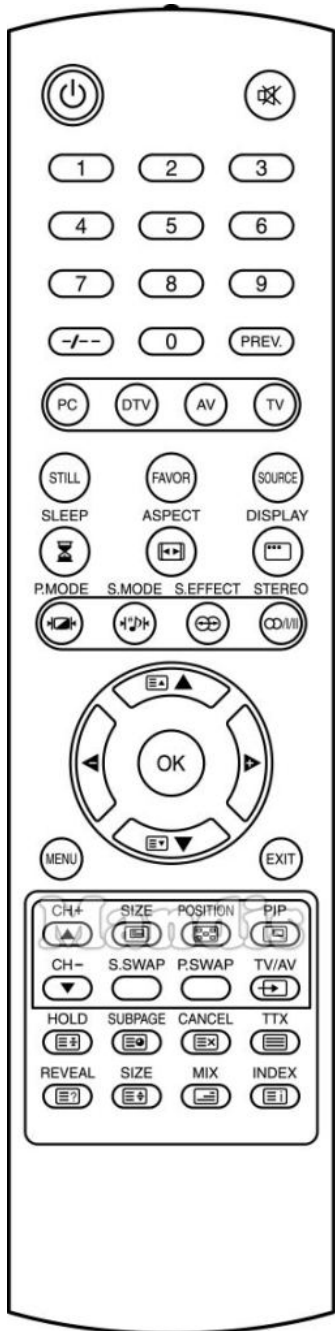










 


 



Original	Replacement	Original	Replacement
	Standby		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Prev.		I<< / Preset-
	PC		Shift + Fav / Marker / PC
	DTV		Shift + 2
	AV		Shift + 3

Original	Replacement	Original	Replacement
	TV		Shift + 1
	Still		Pause / Step / Freeze
	Favor		Fav / Marker / PC
	Source		AV / Input / RDS
	Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format
	Display		Display / Media
	Red / P.Mode		Picture / Format
	Red / P.Mode		Red / Netflix / Search
	Green / S.Mode		Shift + Sound / Title
	Green / S.Mode		Green / APP / Repeat
	Yellow / S.Effect		Sound / Title
	Yellow / S.Effect		Yellow / YouTube / Repeat
	Blue / Stereo		Audio / Lang I/II
	Blue / Stereo		Blue / Prime Video / Random
	Up / CH+		Up
	Up / CH+		CH+ / Page+





Original	Replacement
	 Left
	 Vol-
	 OK
	 Vol+
	 Right
	 Menu / Home
	 Down
	 CH- / Page-
	 Exit / Cancel / Clear
	 Shift + CH+ /
	 Shift + Red / Netflix /
	 Shift + Green / APP /
	 Smart / List
	 Shift + CH- /
	 Shift + Blue / Prime
	 Shift + Yellow / YouTube /
	 Shift + AV / Input / RDS

Original	Replacement
	 Stop / Hold
	 Subtitle / EQ
	 Shift + Exit / Cancel / Clear
	 Text / Goto
	 D.Menu / Top
	 Zoom / Size
	 Shift + Text /
	 Info / Angle

