







 
 

 
 

 

 



 

 



 

 

 











	Original	Replacement		Original	Replacement
	Power		Power		6/↑
	Mode		D.Menu / Top		7/*
	Mute		Mute / Dimmer		8/0
	Band		TV/Radio /		9/#
	Vol+		Vol+		
	APS		Text / Goto		
	l<<		l<< / Preset-		
	Sel		OK		
	>>l		>>l / Preset+		
	CLK		Sleep / Timer		
	Vol-		Vol-		
	ST		Sound / Title		
	1/PAU		1		
	2/INT		2		
	3/RPT		3		
	4/RDM		4		
	5/↓		5		

