































 









 



Original	Replacement	Original	Replacement
On/Off	 Power	Text	 Text / Goto
Mute	 Mute / Dimmer	TV/AV	 AV / Input / RDS
Store	 Play / Slow	Menu	 Menu / Home
Aft/Caf	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Game Coo	 Rec / Rec Mode	Menu Left	 Left
Tune-	 << / Tune-	OK Enter	 OK
Tune+	 >> / Tune+	Menu Right	 Right
Tone+	 >>I / Preset+	Menu Off	 Exit / Cancel / Clear
Reveal	 Sound / Title	Menu Down	 Down
Menu audio	 Audio / Lang I/II	Back	 Back / Return
Subt.List	 Subtitle / EQ	Volume+	 Vol+
Update	 Picture / Format	Browse	 Smart / List
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Disp	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-



Original	Replacement	Original	Replacement
1	 1	Off/Tim	 Shift + Exit / Cancel / Clear
2	 2	Display	 Shift + Display / Media
3	 3	Search	 Shift + Red / Netflix /
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
Mix Scan	 Shift + Goto Text /		

Goto

