





 



 
 






 

 

 



 














 





 

 

 

 

 















Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Power	 Power
 Green/List	 Green / APP / Repeat
 Blue/[]	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Up	 Up
 Text	 Setup / OPT /
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/-/--	 0
 <<	 >> / Tune+
 Play	 Play / Slow
 >>	 I<< / Preset-
 Rec	 Rec / Rec Mode

















 

 

 



 



 









Original	Replacement
	 Stop / Hold
	 Pause / Step / Freeze

Original	Replacement





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Power	 Power
 Green/List	 Green / APP / Repeat
 Blue/[]	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Up	 Up
 Text	 Setup / OPT /
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 <<	 >> / Tune+
 Play	 Play / Slow
 >>	 I<< / Preset-
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold











 







 

 

 

 

 

 

 







Original	Replacement

Original	Replacement





Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Power	 Power
 Green/List	 Green / APP / Repeat
 Blue/[]	 Blue / Prime Video / Random
 Red	 Red / Netflix / Search
 Up	 Up
 Text	 Setup / OPT /
 Left/Zoom-	 Left
 OK	 OK
 Right/Zoom+	 Right
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 PR-	 CH- / Page-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 AV	 AV / Input / RDS
 0/-/0	 0
 <<	 >> / Tune+
 Play	 Play / Slow
 >>	 I<< / Preset-
 Rec	 Rec / Rec Mode





Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze

