







































































Original	Replacement	Original	Replacement
 Ouvrir/Fermer	 Eject / Surround	 8	 8
 Video/Y	 AV / Input / RDS	 9	 9
 Marche	 Power	 Sous Titre	 Subtitle / EQ
 Menu	 Menu / Home	 Annul	 Exit / Cancel / Clear
 Mode	 Smart / List	 0	 0
 Affichage	 Display / Media	 10+	 Guide / EPG / -/-
 NTSC/PAL	 Picture / Format	 Config	 Setup / OPT /
 Chercher	 Red / Netflix / Search	 Retour	 Back / Return
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 Valider	 OK
 Angle	 Info / Angle	 Right	 Right
 4	 4	 Arreter	 Stop / Hold
 5	 5	 Down	 Down
 6	 6	 Zoom	 Zoom / Size
 Titre	 Sound / Title	 Pause	 Pause / Step / Freeze
 7	 7	 Lecture	 Play / Slow



