 


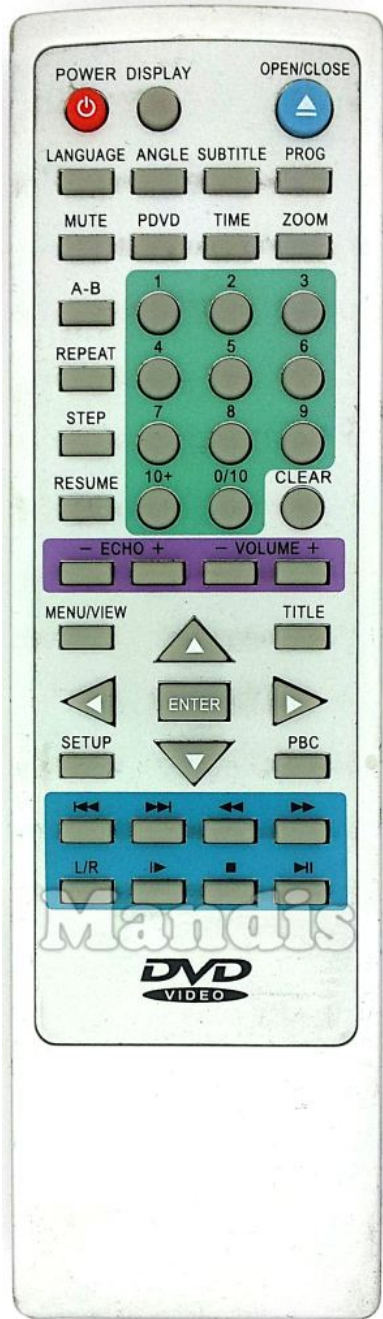




 




 



















Original	Replacement
Power	Power
Display	Display / Media
Open/Close	Eject / Surround
Language	Audio / Lang I/II
Angle	Info / Angle
Subtitle	Subtitle / EQ
Prog	TV/Radio /
Mute	Mute / Dimmer
PDVD	AV / Input / RDS
Time	Sleep / Timer
Zoom	Zoom / Size
A-B	Yellow / YouTube / Repeat
1	1
2	2
3	3
Repeat	Green / APP / Repeat
4	4

Original	Replacement
5	5
6	6
Step	Shift + Pause / Step /
7	7
8	8
9	9
Resume	Smart / List
10+	Guide / EPG / -/-
0/10	0
Clear	Exit / Cancel / Clear
Echo-	CH- / Page-
Echo+	CH+ / Page+
Volume-	Vol-
Volume+	Vol+
Menu/View	Menu / Home
Up	Up
Title	Sound / Title





Original		Replacement		Original		Replacement	
	Left		Left				
	Enter		OK				
	Right		Right				
	Setup		Setup / OPT /				
	Down		Down				
	PBC		Picture / Format				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	<<		<< / Tune-				
	>>		>> / Tune+				
	L/R		Text / Goto				
	I>		Pause / Step / Freeze				
	Stop		Stop / Hold				
	Play/Pause		Play / Slow				

