





 













 





 













































Original	Replacement
 Power	 Power
 Text	 Text / Goto
 △	 Setup / OPT /
 Help	 Zoom / Size
 Rec	 Rec / Rec Mode
 D.Menu / Top	 D.Menu / Top
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0
 Enter	 Fav / Marker / PC
 Vol+	 Vol+
 Language	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK









 



















 



 





 











 



















Original	Replacement
	Right
	Menu / Home
	Down
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Smart / List
	Picture / Format
	TV/Radio /
	Display / Media

Original	Replacement






Original	Replacement
 Power	 Power
 Text	 Text / Goto
 △	 Setup / OPT /
 Help	 Zoom / Size
 Rec	 Rec / Rec Mode
 D.Menu / Top	 D.Menu / Top
 Stop	 Stop / Hold
 <<	 << / Tune-
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Replacement
 7	 7
 8	 8
 9	 9
 Back	 Back / Return
 0	 0
 Enter	 Fav / Marker / PC
 Vol+	 Vol+
 Language	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Up	 Up
 Info	 Info / Angle
 Left	 Left
OK	OK





Original	Replacement	Original	Replacement
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Digital TV		Smart / List
	Movie		Picture / Format
	Radio		TV/Radio /
	Media		Display / Media

